



OBLON, SPIVAK, ET AL DOCKET #: 218204US2S INV: Fujihito NUMANO, et al. SHEET 1_OF_9

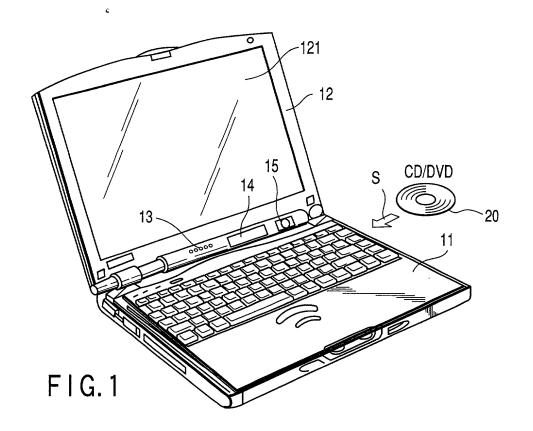


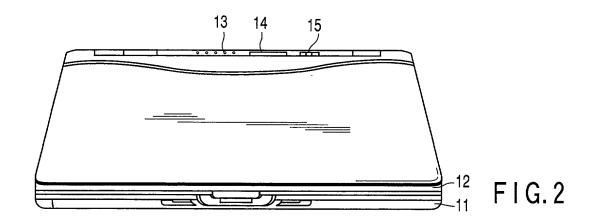

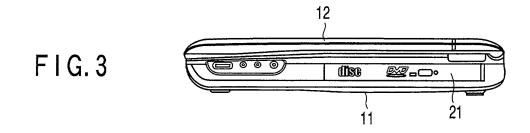

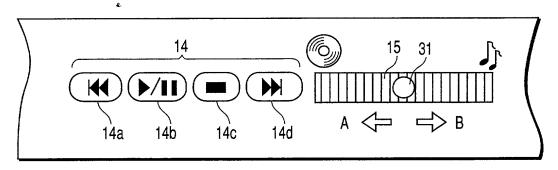

F I G. 4

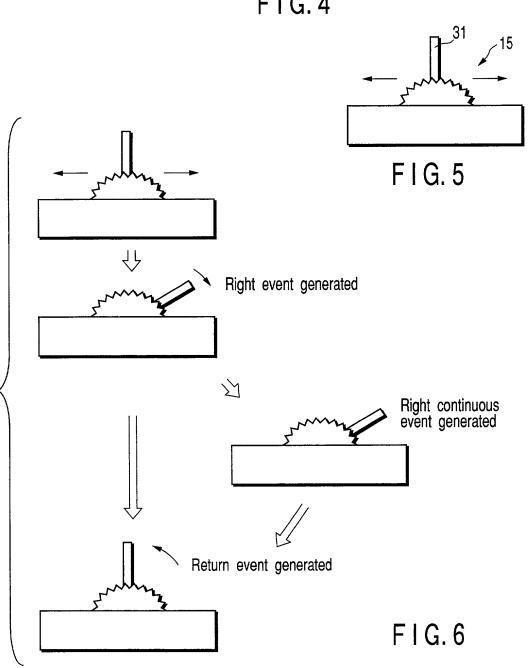

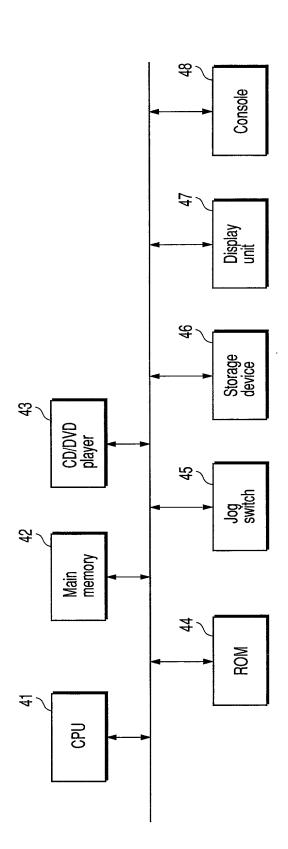


FIG.

OBLON, SPIVAK, ET AL DOCKET #: 218204US2S INV: Fujihito NUMANO, et al. SHEET 4_OF_9



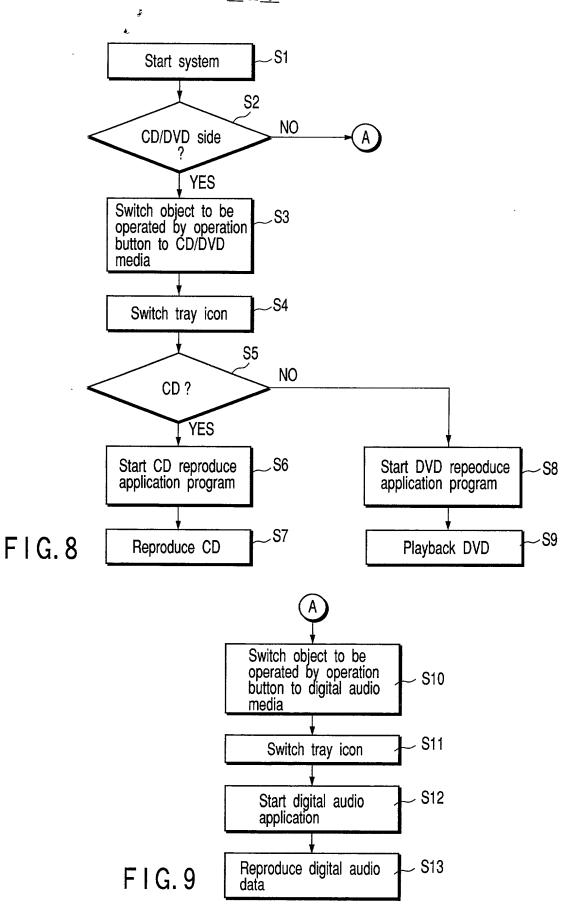



FIG. 10

OBLON, SPIVAK, ET AL DOCKET #: 218204US2S INV: Fujihito NUMANO, et al. SHEET 5 OF 9 Start S21 NO CD/DVD side YES S22 Switch object to be operated by operation button to CD/DVD media S23 Switch tray icon S24 NO CD? YES S25 S27 Start DVD reproduce application program Start CD reproduce application program S26 S28 Reproduce CD Reproduce DVD Switch object to be operated by operation button to digital audio S30 media S31 Switch tray icon

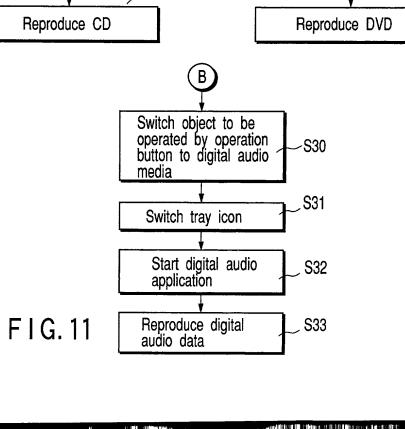

OBLON, SPIVAK, ET AL DOCKET #: 218204US2S INV: Fujihito NUMANO, et al. SHEET <u>6</u> OF <u>9</u>

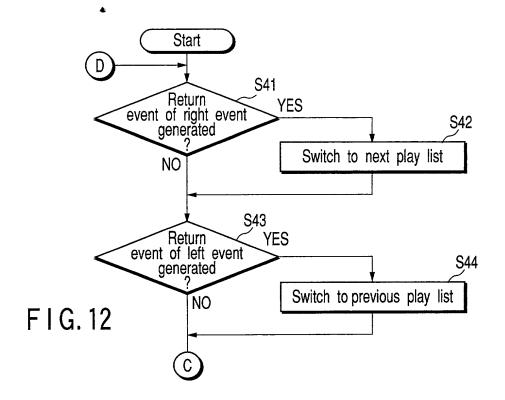

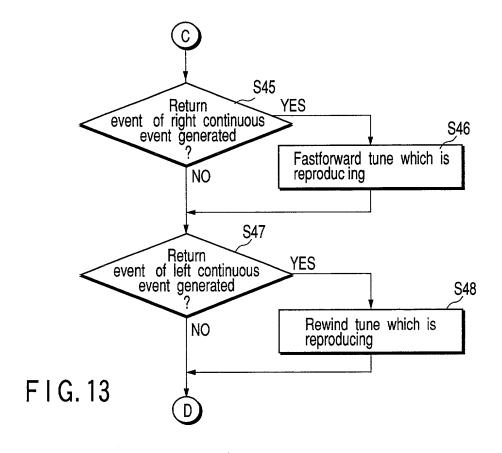

OBLON, SPIVAK, ET AL DOCKET #: 218204US2S INV: Fujihito NUMANO, et al. SHEET 7 OF 9




FIG. 14




FIG. 15

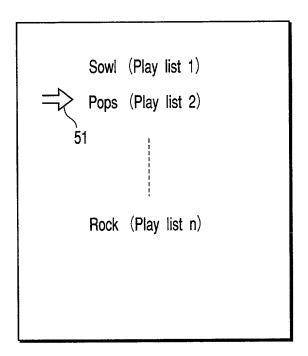


FIG. 16

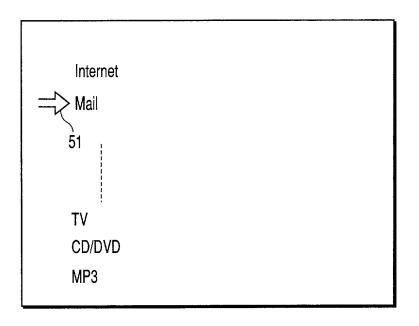


FIG. 17

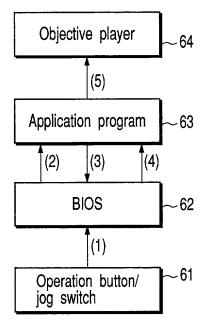


FIG. 18

Reproduce order	Play list
1	Play list A
2	Play list B
3	Play list C
4	Play list D
5	Play list E

FIG. 19